



## MAINTENANCE INSTRUCTIONS REGUPOL UPSCALE LRP/LRT

### INITIAL CLEANING

1. Remove all loose debris by vacuuming, sweeping, or dust mopping.
2. Wet scrub the floor using a buffer or auto scrubber fitted with a soft nylon brush. The floor can also be cleaned by hand using a microfiber mop head. We recommend Diversey Profi Floor Cleaner and Grease Remover (see note) but any neutral pH (7-9) is acceptable. Dilute 10 oz. of solution per gallon of water. Do not flood the floor with water.
3. Pick up cleaning solution with a wet vacuum, rinse with clean water. Again, do not flood the floor with water. Wet vac the floor again to remove the rinse water.
4. Allow the floor to completely dry before allowing foot traffic.

### REGULAR MAINTENANCE

1. Keep the floor free from loose debris by sweeping, dust mopping, or vacuuming daily or as needed.
2. Damp mop with a microfiber mop or auto-scrubber with a soft nylon brush and 6-10 oz of diluted Diversey Profi Floor Cleaner and Grease Remover.
3. Pick up cleaning solution with a wet vacuum, rinse with clean water. Again, do not flood the floor with water. Wet vac the floor again to remove the rinse water.
4. Allow the floor to completely dry before allowing foot traffic.

**Notes:** Diversey products are manufactured by Diversey Inc. For additional information go to [www.diversey.com](http://www.diversey.com).

### REGUPOL America LLC

11 Ritter Way | Lebanon, PA 17042

phone +1 800 537 8737 | [info@regupol.com](mailto:info@regupol.com)

**regupol.us**

©2023 REGUPOL America LLC

 **REGUPOL**

UPSCALE US  
RAAP-2023.11.0112V1